
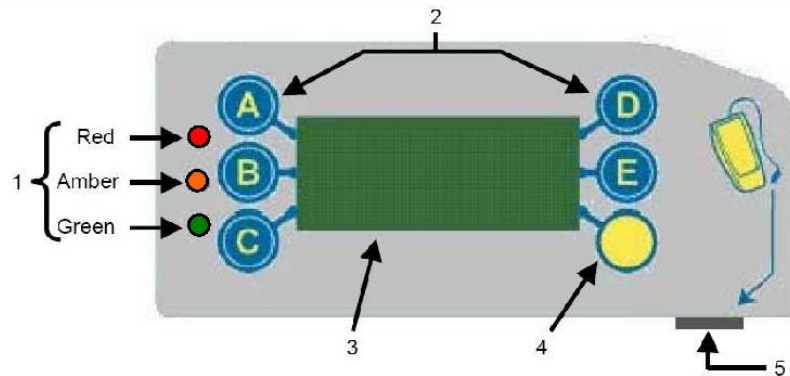
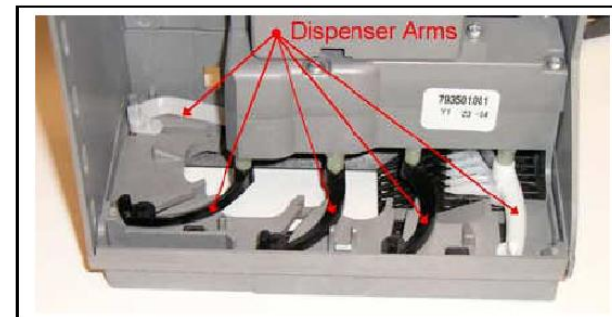
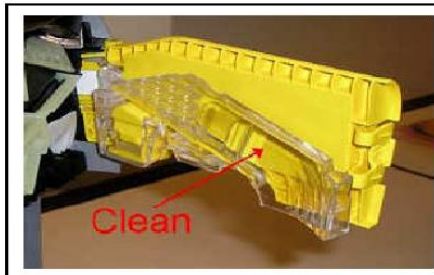
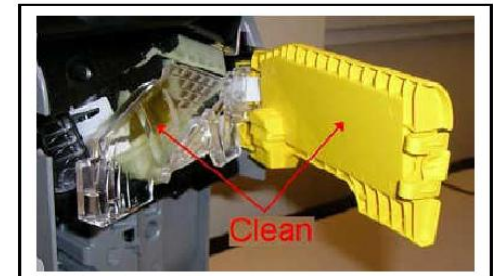


## ניקוי המנגנון – עם חומר אנטי-סטטי בלבד!

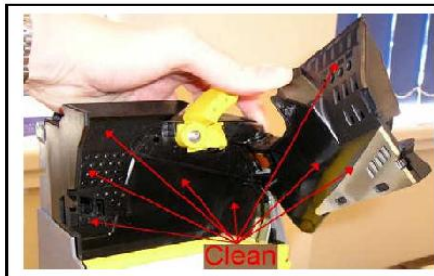

1	3 LEDs	1. נורית : אדום, כתום, ירוק
2	A to E	2. שחרור מטבעות
3	Display (LCD)	3. מסך
4	Mode Button	4. כניסה לתפריט
5	Service Connector	5. כניסה למכשיר כיוול

**ירוק קבוע** : מנגנון תקין

**כתום קבוע** : אין תקשורת עם המכונה (לכבות ולהדליק מכונה)

**כתום מהבהב** : לבדוק מספר הבהובים:



X 1: לבדוק יח' קבלת מטבעות – פיזית ודרך התוכנה

X 2: לבדוק שערים - פיזית ודרך התוכנה

X 3: להוציא קסטה ולהחזיר (להקשיב לחמישה קליקים)

X 4: מחזירי עודף (להוציא קסטה וללחוץ פעמיים צהוב)

\*\*אדום וירוק מהבהב יחד : מנגנון מושבת. למעבדה!

# Menu Structure


## כניסה לתפריט

1. לחץ צהוב
2. לחץ E
3. לחץ A,B,C
4. יופיע PRICES על הצג



בדיקת מנגנון

Press button D - Scrolls UP the menus  
 Press button E - Scrolls Down the menus

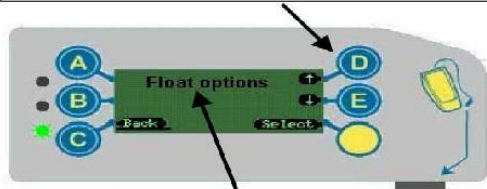

Menu Option Selected

### EXAMPLE: - How to set the language

1. Press the 'Mode' button once
2. Press button 'E' to select 'Setup'
3. Enter pass code, Press 'A" "B" "C'
4. Press button 'D' to scroll up the menu until the display shows 'Language'
5. Press 'Select' then 'Edit'
6. Use button 'D' or 'E' to scroll to the required language
7. Select 'OK'
8. Select 'Back' and 'Back' again to save and exit your setting

Service Mode Menu Starts from Here

Only if messages available

